

# Changing the filter.

**Austin Air**  
*for life.*


You will need a large plastic garbage bag to dispose of the old filters. You will also need a pair of work gloves and a Phillips head screwdriver.




- 1** Unplug the unit from its power outlet.



- 2** Turn the unit upside down on a soft surface to avoid scratching the unit.

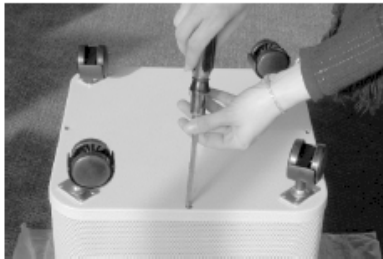

- 3** Remove the 4 retaining screws from the bottom cover.

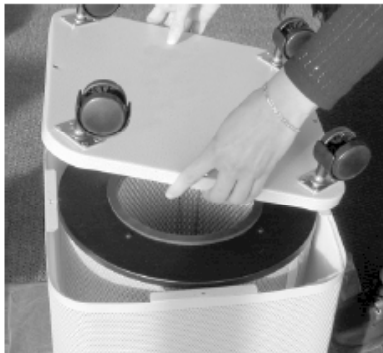


- 4** Lift the bottom cover off and set it aside.




- 5** Wearing your work gloves, grasp the filter, carefully lift it out and place in a plastic trash bag.



- 6** Remove the pre-filter.

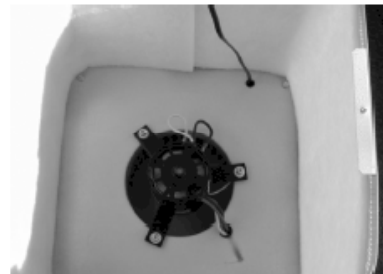

- 7** Replace pre-filter as shown.

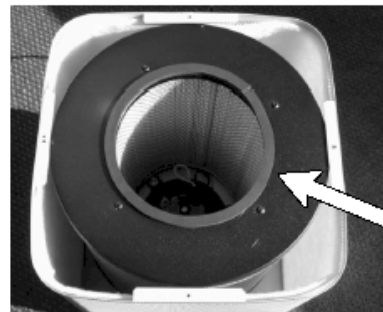

- 8** Install new filter as shown. Make sure label side is down toward the motor. Note position of bottom seal vs. top.

- 9** Replace bottom cover.

- 10** Replace 4 screws.

- 11** Run the filter on high for at least 1 hour.

**CAUTION: FILTER MAY  
HAVE SHARP EDGES...  
PLEASE WEAR GLOVES!**